

Innovative Heat Concepts, LLC

Energy Efficient

Baptismal Heater

The first step is to take the heater out to the pool, immerse the heater in the water, and plug it in. Make sure your outlet is protected from rain and is capable of handling 15 amps. Keep in mind the heater will not turn on unless your room temperature is 79° F or lower.

Start the heating process 24 hours before the service.

CAUTION: The heater must be unplugged and removed during the service.

If the GFCI green light is not on

1. No power, check your breaker panels circuit breakers
2. The GFCI plug or outlet may have become wet
3. Water may be in the heating element, the heater has to be replaced.
Check your warranty!

Do Not Overload your breakers
The 1KW heater is rated at 15 amps, one heater
Per 120v. The 2KW is rated at 16amps you
Must use an outlet rated at the heater load.



The temperature sensor
Must be submerged in the water

It is ok to temporarily
Hold the HOT heater from
the cable

During Operation, the heater must lay
flat on the bottom of the baptismal/pool

Returns other than factory defects
Are subject to a 25% restocking charge.

One Year Warranty

Innovative Heat Concepts, LLC
127 SW 5th Avenue
Homestead, FL 33030
P: 305-238-4971 F: 305-248-4371
Website:
www.innovativeheatconcepts.com
Email: info@innovativeheatconcepts.com